


Safety First: This document provides all the necessary information to allow your Whelen product to be properly and safely installed. Before beginning the installation and/or operation of your new product, the installation technician and operator must read this manual completely. Important information is contained herein that could prevent serious injury or damage.

- Proper installation of this product requires the installer to have a good understanding of automotive electronics, systems and procedures.
- Whelen Engineering requires the use of waterproof butt splices and/or connectors if that connector could be exposed to moisture.
- · Failure to use specified installation parts and/or hardware will void the product warranty!
- If mounting this product requires drilling holes, the installer MUST be sure that no vehicle
 components or other vital parts could be damaged by the drilling process. Check both
 sides of the mounting surface before drilling begins. Also de-burr any holes and remove
 any metal shards or remnants. Install grommets into all wire passage holes.
- Do not install this product or route any wires in the deployment area of your air bag. Equipment mounted or located in the air bag deployment area will damage or reduce the effectiveness of the air bag, or become a projectile that could cause serious personal injury or death. Refer to your vehicle owner's manual for the air bag deployment area. The User/Installer assumes full responsibility to determine proper mounting location, based on providing ultimate safety to all passengers inside the vehicle.
- For this product to operate at optimum efficiency, a good electrical connection to chassis ground must be made. The recommended procedure requires the product ground wire to be connected directly to the NEGATIVE (-) battery post.

Mounting:

- Mark the location of the 2 mounting holes onto the mounting surface using the dimensions shown, or use the flange as a template. Always check behind the mounting surface to be sure you will not harm other vehicle components.
- Drill the 2 mounting holes using a drill sized for a #6 sheet metal screw, then drill the 7/8" wire access hole as shown. Deburr this hole before continuing.
- Feed wires through wire hole then secure Strip-Lite[™] to mounting surface as shown.

IMPORTANT! Proper installation requires the vent membrane to be located above the horizontal centerline of the installed Strip-Lite!

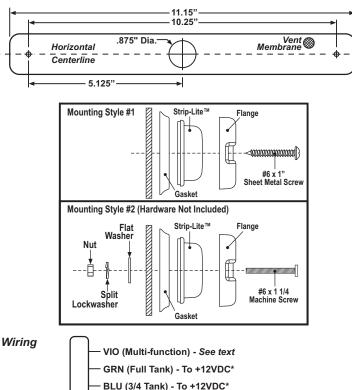

- YEL (1/2 Tank) To +12VDC*
- - BLK To Ground

* Fuse all +VDC wires @ 3 Amps

Waterproof butt splices and/or connectors are required if that connection could be exposed to moisture. Any unused wires must be sealed (waterproofed) to prevent moisture infiltration.

- If this product uses a remote device to activate or control this product, make sure that this
 control is located in an area that allows both the vehicle and the control to be operated
 safely in any driving condition.
- · Do not attempt to activate or control this device in a hazardous driving situation.
- This product contains either strobe light(s), halogen light(s), high-intensity LEDs or a combination of these lights. Do not stare directly into these lights. Momentary blindness and/or eye damage could result.
- Use only soap and water to clean the outer lens. Use of other chemicals could result in
 premature lens cracking (crazing) and discoloration. Lenses in this condition have
 significantly reduced effectiveness and should be replaced immediately. Inspect and
 operate this product regularly to confirm its proper operation and mounting condition. Do
 not use a pressure washer to clean this product.
- WARNING! All customer supplied wires that connect to the positive (+) terminal of the battery must be sized to supply at least 125% of the maximum operating current and <u>FUSED</u> "at the battery" to carry that load. DO NOT USE CIRCUIT BREAKERS WITH THIS PRODUCT!
- FAILURE TO FOLLOW THESE PRECAUTIONS AND INSTRUCTIONS COULD RESULT IN DAMAGE TO THE PRODUCT OR VEHICLE AND/OR SERIOUS INJURY TO YOU AND YOUR PASSENGERS!

Multi-Function Wire (Violet):

The VIO wire controls two functions; a) High/Low Power and b) Display Style.

High/Low Power - High/Low power can be controlled in one of two ways:

Latching Mode: Apply +VBAT to the VIO wire for less than 1 second to "latch" the light into low power mode. Apply +VBAT for 2 seconds and release to restore High Power. Turning the light off, then on again will restore High Power as well.

Level Mode: Applying +VBAT to the VIO wire for more than 1 second holds the lightbar in low power mode until voltage is removed.

Display Style - *NOTE!* Changing the Display Style requires connecting the VIO wire to a ScanLock+ Programmer. Six different styles may be selected by choosing one of the following Modes:

Mode 1 - Each color (except Green) has a Dim upper section and Bright lower section.

- Mode 2 Only the Bright section for each color is displayed
- Mode 3 Each color is Bright across the length of the strip.

Mode 4 - Mode 1, Class 1 (see below)

Mode 5 (default) - Mode 2, Class 1 (see below)

Mode 6 - Mode 3, Class 1 (see below)

Class 1 Operation:

- Full Green (Solid)
- 7/8 Full Green (Flashing)
- 3/4 Full Blue (Solid) 5/8 Full - Blue (Flashing)
- 1/2 Full Amber (Solid)
- 3/8 Full Amber (Flashing)
- 1/4 Full Red (Solid)
- 1/8 Full Red (Flashing)
- Empty Solid Red Triple Flashing (no Dim segments in Mode 4)

Diagnostic Display

Low Sensor Voltage - Alternating Red and Amber Over Sensor Voltage - Alternating Blue and Green

Note: Except for "Empty" condition, flashing is controlled by the "Intelli-Tank" Module.

It is the responsibility of the installation technician to make sure that the installation and operation of this product will not interfere with or compromise the operation or efficiency of any vehicle equipment!

Before returning the vehicle to active service, visually confirm the proper operation of this product, as well as all vehicle components/equipment.

IMPORTANT WARNING!

CAUTION! DO NOT LOOK DIRECTLY AT THESE LEDS WHILE THEY ARE ON. MOMENTARY BLINDNESS AND/OR EYE DAMAGE COULD RESULT!

For warranty information regarding this product, visit www.whelen.com/warranty

Warnings to Installers

Whelen's emergency vehicle warning devices must be properly mounted and wired in order to be effective and safe. Read and follow all of Whelen's written instructions when installing or using this device. Emergency vehicles are often operated under high speed stressful conditions which must be accounted for when installing all emergency warning devices. Controls should be placed within convenient reach of the operator so that he can operate the system without taking his eyes off the roadway. Emergency warning devices can require high electrical voltages and/or currents. Properly protect and use caution around live electrical connections. Grounding or shorting of electrical connections can cause high current arcing, which can cause personal injury and/or vehicle damage, including fire. Many electronic devices used in emergency vehicles can create or be affected by electromagnetic interference. Therefore, after installation of any electronic device it is necessary to test all electronic equipment simultaneously to insure that they operate free of interference from other components within the vehicle. Never power emergency warning equipment from the same circuit or share the same grounding circuit with radio communication equipment. All devices should be mounted in accordance with the manufacturer's instructions and securely fastened to vehicle elements of sufficient strength to withstand the forces applied to the device. Driver and/or passenger air bags (SRS) will affect the way equipment should be mounted. This device should be mounted by permanent installation and within the zones specified by the vehicle manufacturer, if any. Any device mounted in the deployment area of an air bag will damage or reduce the effectiveness of the air bag and may damage or dislodge the device. Installer must be sure that this device, its mounting hardware and electrical supply wiring does not interfere with the air bag or the SRS wiring or sensors. Mounting the unit inside the vehicle by a method other than permanent installation is not recommended as unit may become dislodged during swerving; sudden braking or collision. Failure to follow instructions can result in personal injury. Whelen assumes no liability for any loss resulting from the use of this warning device. PROPER INSTALLATION COMBINED WITH OPERATOR TRAINING IN THE PROPER USE OF EMERGENCY WARNING DEVICES IS ESSENTIAL TO INSURE THE SAFETY OF EMERGENCY PERSONNEL AND THE PUBLIC.

Warnings to Users

Whelen's emergency vehicle warning devices are intended to alert other operators and pedestrians to the presence and operation of emergency vehicles and personnel. However, the use of this or any other Whelen emergency warning device does not guarantee that you will have the right-of-way or that other drivers and pedestrians will properly heed an emergency warning signal. Never assume you have the right-of-way. It is your responsibility to proceed safely before entering an intersection, driving against traffic, responding at a high rate of speed, or walking on or around traffic lanes. Emergency vehicle warning devices should be tested on a daily basis to ensure that they operate properly. When in actual use, the operator must ensure that both visual and audible warnings are not blocked by vehicle components (i.e.: open trunks or compartment doors), people, vehicles, or other obstructions. It is the user's responsibility to understand and obey all laws regarding emergency vehicle warning devices. The user should be familiar with all applicable laws and regulations prior to the use of any emergency vehicle occupants. However, because sustained periodic exposure to loud sounds can cause hearing loss, all audible warning devices should be installed and operated in accordance with the standards established by the National Fire Protection Association.